iCandy®

The iCandy apple is a quality product designed and distributed by:
iCandy World Limited
Montgomery Way
Biggleswade
Bedfordshire
SG18 8UB
England

F: +44 (0) 1767 604410
Email: info@icandyuk.com
www.icandyworld.com

© iCandy World Limited.

iCandy®

iCandy apple instruction manual

IMPORTANT
Keep for future reference

Read these instructions carefully before use and keep them for future reference.
Your child's safety may be affected if you do not follow these instructions.

WARNING! It may be dangerous to leave your child unattended.
Safety tested and certified to BSEN1888:2003 for the UK and Europe,
ASTM F833-08 for the USA and SOR-85-379 for Canada.
Tested to ensure compliance with the Furniture and Furnishings (Fire) (safety) Regulations.

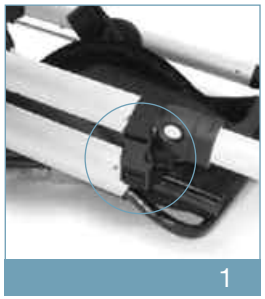
1

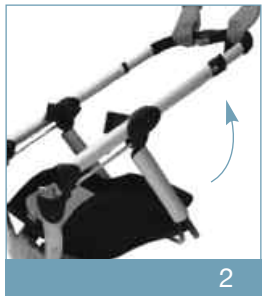
2

3

4

5

6

7

8

9

10

11

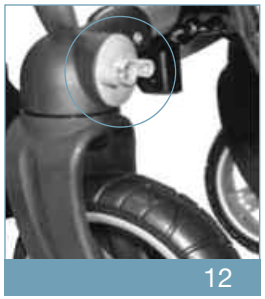
12

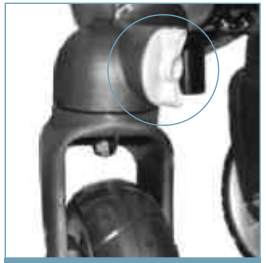
13

14

15

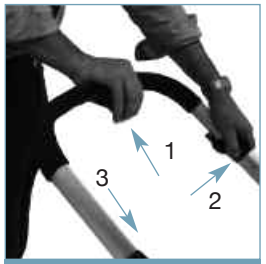

16

17

18

19

20

21

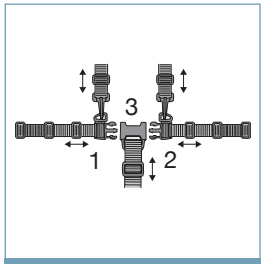

22

23

24 & 25

iCandy apple instructions

Correct use and maintenance of your pushchair is essential. Please take the time to fully and carefully read this instruction manual. If you require any further advice or assistance when using your pushchair, please contact the place of purchase.

1. WARNING With the exception of the outer packaging carton, to prevent injury from choking, remove and immediately discard all other protective packaging on this product.

Follow these simple instructions to assemble your iCandy apple.

a canopy (hood)
b bumper bar
c seat unit
d chassis
e rear wheels
f car seat adaptors (sold separately)
g raincover

The iCandy apple is tested to comply with BSEN 1888:2003 and is tested to ensure compliance with the Furniture and Furnishings (Fire) (Safety) Regulations.

Useful tip

New products are sometimes stiff to engage and operate. We recommend ALL adaptors (sold separately) and connector parts be lightly lubricated with a silicone based furniture polish. This is best achieved by spraying polish onto a soft cloth and applying to relevant parts.

1. Folded/hold together latch

To release the folding strap depress both indicated clips simultaneously. **This latch must be engaged before storage.**

2. To open

To open the iCandy apple stand behind the pushchair and, with both hands on the pushbar, pull-up until the iCandy Apple clicks into place.

3. Fitting the brake bar/rear axle assembly

Turn the iCandy apple upside down. Position the brake bar / rear axle assembly with the brake levers uppermost. Once the rear axle assembly is secure to the main chassis pull firmly on each side of the combined brake bar / rear axle assembly to check that the assembly on both sides is securely locked into place.

4. To fit the rear wheels

Lift locking locating catch. Place the wheel into the axle. Release locking locating catch and wheel should lock into position. Pull on wheel to ensure that it is securely fitted. This process is repeated for the other side.

5. Attaching the canopy (hood)

Fit the canopy by locating onto the seat frame ensuring it latches into the bracket securely.

6. Removing the canopy (hood)

Remove canopy by depressing both side clips as shown and pull to remove.

7. Bumper bar

Attach the bumper bar onto the brackets, it will click into place. Press in grey buttons simultaneously and pull up bumper bar to release.

8. Bumper bar blanks

Bumper bar/carry handle blanks can be fitted if preferred.

9. Attaching the seat unit to the chassis

Insert the seat adaptor assembly into the main connector on the frame. You can position the seat unit to have your child facing you or facing forward.

2. WARNING This seat is not suitable for children under 6 months.

3. WARNING Check that the pram body (carrycot) or seat unit attachment devices are correctly engaged before use.

10. Reclining the seat unit

To recline the seat unit press the grey buttons on both sides and move into required reclined or upright position. Release buttons when in desired position.

11. Adjusting the footrest

Press both buttons on the sides of the leg rest, adjust to desired position and release to lock.

12 & 13. Front wheel

The front wheels can be selected either in a fixed position or in a swivel position.

14. Handle height adjustment

There are seven handle height positions. To adjust, press the grey centre button and pull up simultaneously to desired level. Release button and engage at the desired height.

15. Using the brakes

To apply brake, press down gently on the middle of the brake bar. Rocking the pushchair assists engagement. To release brake, place foot under brake bar and pull upwards.

4. WARNING Always apply the brakes when the pushchair is stationary.

16 & 17. Folding the chassis

Remove the seat unit before folding. Press the grey handle height adjuster button 1 whilst depressing the secondary lock button 2. When the handle is at its lowest point, push downwards to disengage and fold the stroller 3. Apply the hold together latch as per picture 1.

Using with a Maxi-Cosi Infant Carrier Car Seat

Maxi-Cosi Infant Carriers are suitable for children from birth to 15 months and weighing up to 13kgs. (As indicated on the Maxi-Cosi Infant Carrier).

5. WARNING Check that the car seat is correctly engaged before use.

18. Attaching the adaptors (sold separately)

Locate and fit the car seat adaptors as shown, ensuring the grey buttons latch flush. The adaptors should lean rearwards for correct orientation.

19. Installing the Maxi-Cosi Infant Carrier

Place the car seat onto the adaptors with the head end at the front until you hear a “click”. Check to make sure that everything is attached securely.

20. Removing the Maxi-Cosi Infant Carrier

Press the control buttons on both sides while at the same time lifting the car seat from the adaptors.

21. Removing the Car Seat Adaptors (sold separately)

Depress the grey buttons and withdraw.

22. Securing your child using the 5-point safety harness

Feed the buckle tongues 1 & 2 into the buckle housing 3 and click together.

Adjust your five-point harness at the points indicated in the direction of the double arrows as required.

To unfasten the harness squeeze in the buckle tongues 1 & 2 and pull out of the buckle housing 3.

D-Rings are provided for attaching an extra harness complying to BS 6684.

6. WARNING To avoid serious injury, always use the 5-point safety harness.

23, 24 & 25. Fitting the PVC Raincover

Fit raincover as shown ensuring velcro tabs are secure where necessary.

7. WARNING Never leave raincovers, hoods and aprons on or over the pushchair indoors, in a hot atmosphere or near a heat source, your child may overheat.

26

27

28

29

30

31

32

33

34

iCandy apple carrycot

26. Remove the mattress

27. Remove the inner liner

28. Stay Bars

Slide the support stay bars at front and rear until under location lugs. Refit the liner and mattress.

29. Operation of the canopy (hood)

Pull up the handle as illustrated until the two grey latching buttons (arrowed) engage with a positive "click". Check that the handle is secure before placing your baby into the carrycot.

30. To lower the canopy (hood)

Depress both grey latching buttons as shown before attempting to rotate the hood handle.

31, 32 & 33. Attaching the carrycot to the chassis

Lower the carrycot as shown ensuring both side grey side buttons latch into place. Ensure securely positioned by pulling up on the handle.
Pull down the stabilizer bar and lock onto the basket bar as shown.

8. WARNING Check that the pram body or seat unit attachment devices are correctly engaged before use.

34. Removal of carrycot

Release and store the stabilizer bar. Depress each grey side button as shown, whilst lifting up gently and simultaneously holding handle. Pull up and clear of chassis once both sides are released.

35. Carrycot Raincovers

Fit raincover over the hood/canopy area before fitting over the foot end of carrycot. Ensure elasticated seams of raincover are positioned under the base of the carrycot.

Carrycot cleaning information

The exterior of the carrycot, hood and apron of the iCandy apple carrycot may be cleaned with a damp cloth.

The lining and cover must be washed by hand using a soft detergent at a maximum temperature of 30 degrees (see instructions on washing label). Do not place in washing machine or tumble-dryer!

9. WARNING The iCandy apple carrycot is only suitable for a child who cannot sit up unaided, roll over and cannot push itself up on its hands and knees. Maximum weight of the child : 9 kg (approx 6 months).

10. WARNING Do not let other children play unattended near the carrycot.

11. WARNING Do not use if any part is broken, torn or missing.

12. WARNING Never use a mattress thicker than 30mm. This will reduce the effective height inside of the carrycot to less than 150mm. When a mattress is purchased separately it should conform to BS1877-part 10 :1997.

Important:

1. Use only on a firm, horizontal, level and dry surface.

2. The handles and the bottom of the carrycots should be inspected regularly for signs of damage and wear.

3. Be aware of the risk of open fire and other source of strong heat, such as electric bar fires, gas fires etc, in the vicinity of the carry cot.

4. The iCandy apple carrycot is not a safe means of transport by car and should NEVER be used as such. Use an approved car safety seat for transport by car.

General Instructions

- Use the iCandy apple for only one child at a time.
- The iCandy apple is suitable for children from birth to approx 4 years (up to 20kg), and when seated, the midpoint of the childs head is at or below the top of the stroller seat. The maximum weight allowance for use with a Maxi-Cosi Infant Carrier is 13kg. The maximum weight allowance for the iCandy apple carrycot is 9kg.
- It is recommended that you do not use the iCandy apple seat unit until your child is able to sit up unassisted, usually at around 6 months.
- Make sure the iCandy apple is fully unfolded and locked before placing your child in it.
- Keep your child away from all moving parts when folding, unfolding or adjusting the pushchair.
- Always apply brakes when parking, even when standing still for a few moments.
- Inspect and clean your pushchair frequently. Never use abrasive cleaners or lubricants.
- Never lift the iCandy apple or use escalators or stairs when there is a child in it.
- Use original accessories and manufacturer-approved parts only. Failure to do so may affect your warranty.
- Do not make any changes to this product. If you have any problems or complaints, contact your retailer or importer.
- To avoid the risk of suffocation, keep all plastic packaging materials out of the reach of children.
- Safety tested and certified to BSEN1888 for the UK and Europe, ASTM F833-08 for the USA and SOR-85-379 for Canada.

⚠ SAFETY WARNINGS

a. **WARNING** It may be dangerous to leave your child unattended. Always keep your child in view while pushchair is in use.

b. **WARNING** Please ensure that your child wears a correctly fitted and adjusted harness at all times. For extra safety, 'D' - ring loops are provided for the attachment of a separate safety harness, if desired, approved to BS 6684.

c. **WARNING** Keep children clear of moving parts before making adjustments. To avoid entrapment, keep your own and your children's fingers clear of any folding parts. Overloading, incorrect folding and the use of non-approved accessories may damage, break or otherwise render the pushchair unsafe for use.

d. **WARNING** Do not allow your child to climb unassisted into the pushchair.

e. **WARNING** This seat is not suitable for children under 6 months.

f. **WARNING** Do not use replacement parts or accessories, e.g. child seats, bag hooks, rain covers, etc. other than those approved by iCandy.

g. **WARNING** Do not overload the pushchair with additional children, heavy packages, goods or accessories. Bags and other items must not be hung from the handle bars as they may damage the frame or otherwise cause the pushchair to become unbalanced and tip over.

h. **WARNING** Hold on to your pushchair when close to any moving road vehicle or train. Even with the brakes on, the draught from the vehicle may cause the pushchair to move. The pushchair should only be used under adult supervision.

i. **WARNING** Do not use the pushchair in a manner for which it is not designed.

j. **WARNING** If the pushchair is to be used by someone unfamiliar with it (e.g. by grandparents) always show them how it works.

k. **WARNING** Always use the crotch strap in combination with the waist belt.

l. **WARNING** Never use the carrycot on a stand.

m. **WARNING** This product is not suitable for running or skating.

n **WARNING** The maximum load for the shopping basket is 5kg.

o. **WARNING** Always keep this Instruction Manual with the iCandy apple pushchair and for future use.

- GENERAL SAFETY - Open fires and heating appliances, particularly portable types, must be guarded by a nursery type fireguard. To avoid burns, keep your child away from hot liquids, cookers, radiators, portable convectors, flexes, fireplaces etc. Use a stair gate at all times.

- NOTE In the interest of customer care and product development, we review the quality of our products on a daily basis. We reserve the right to modify or amend the specification of our products and their parts without prior notice.

Product Care and maintenance

The iCandy apple pushchair requires regular maintenance by you.

- Regularly inspect the locking devices, brakes, harness assembly, catches, seat adjusters, joints and fixings to ensure they are secure and in full working order.
- The brakes and wheels are subject to wear and should be replaced as and when necessary.
- Should any parts of your iCandy apple pushchair become stiff or difficult to operate, ensure that dirt is not the cause. Then try a light application of a sprayable lubricant e.g. silicon spray, ensuring that the lubricant penetrates between the components, but take care as excessive application may encourage the accumulation of dirt. Regular light lubrication of moving parts will extend the life of your pushchair and make opening and folding easier.
- Do not leave the iCandy apple pushchair in sunlight for prolonged periods as the colour of some fabrics may fade.
- Store the pushchair in a dry, well ventilated and safe place.
- Your pushchair should be serviced and reconditioned before using it for a second baby, or within 18 months, whichever is the sooner. This can be arranged by contacting your iCandy dealer.

Product Care and maintenance

- The plastic and metal parts of the pushchair may be sponged clean with warm water and a mild detergent.
- The seat unit may be cleaned by sponging lightly with warm water and a mild detergent.
- Never clean with abrasive, ammonia or bleach-based and spirit-type cleaners.
- Allow all parts to dry thoroughly before storing.
- After exposure to wet or damp conditions, leave the pushchair fully opened in a warm, well-ventilated environment. Dry it off with a soft, lint free and absorbent cloth. Residual moisture, left unattended, will encourage mildew or rust to form, damaging the pushchair.

Warranty

Our products are warranted against defects in materials and workmanship for a period of two years from date of purchase. The warranty period for an iCandy apple carrycot is six months from date of purchase. If the product has a manufacturing fault we will repair it for free. If it is not practical to repair it we will, at our discretion replace the part in question. If the product fails due to wear and tear, accident, neglect or negligence, or is outside the warranty we will happily repair it for a reasonable charge.

The warranty covers the original purchaser buying the product from an authorised dealer. Proof of purchase is required.

The warranty covers workmanship or materials that are deemed faulty, providing the pushchair has at all times been used in normal conditions, in accordance with instructions, and been properly maintained. The warranty does not cover second hand product, modified product, poorly maintained product, normal wear, fading and fabric cuts, improper use (by way of example): abnormal use; not following instructions; child left unattended; safety harness not used; excessive load; transport damage i.e. airline or freight damage.

Customer costs within warranty include inward freight charges to return the product to manufacturer's representative for warranty and or service.

Manufacturer's representative reserves the right to charge a service fee and/or charge for parts replaced/repaired. A return freight charge may apply.

Exclusions. Any consequential loss or damage to any person or property directly or indirectly as a result of using product.

Please discuss any warranty or service queries with your store of purchase. **You will be required to show proof of purchase.** They will inform you of the next step. Products that are returned directly to manufacturer by customer will NOT be eligible for warranty.

Please register your product purchase through our online warranty registration by visiting www.icandyuk.com

Please be advised you need to register your serial number in order to activate your two year manufacturing warranty. Your serial number can be found on the shopping basket bar of your stroller and on the stabilising bar of the carry cot. It's a white label and clearly has the word serial number with digits afterwards. To access the serial number on your stroller, please remove the shopping basket fabric to reveal the number.

iCandy apple accessories

Accessories available for the iCandy apple:

- Maxi-Cosi Car Seat Adaptors.
- Superfleece Luxury Footmuff - available in a selection of colours.
- Core Seat Snuggle - available in a selection of colours. (Not shown).
- Sun Parasol - available in a selection of colours.
- Lifestyle Changing Bag available.
- Cup Holder available. (Not shown).
- Parasol/cupholder clamp. (Not shown).
- Flavour pack - available in a selection of colours.
- Jogger wheel. (Not shown).
- Travel Bag available. (Not shown).